


NC600CP Non Concussive Basin Tap (Pair)

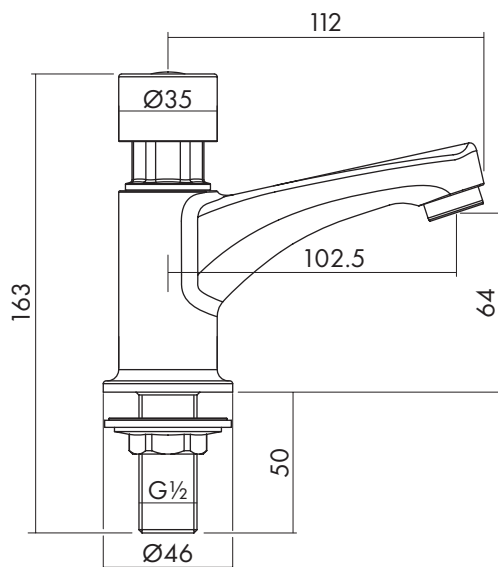

Operating Conditions

Max. Inlet Pressure:	5 bar (dynamic)
Min. Inlet Pressure:	1.0 bar (dynamic)
Max. Inlet Temperature:	65 °C
Timed Flow @ 3 bar:	15 ± 5 sec
Flow Rate:	4 l/min
Max. Basin Thickness:	26mm

Water Supply (Water Fittings) Regulations 1999

Your Inta taps must be connected in accordance with the Water Byelaws.

To prevent back flow and contamination of the water supply for drinking and culinary purposes taps must provide a AUK2 or AUK3 air gap between the outlet and basin.

Inta basin taps provide a type AUK2 tap gap, for domestic usage, and a type AUK3 for non domestic locations.

In order to prevent any risk of scalding, the hot tap should be connected via an Intamix Thermostatic Mixing Valve (40015CP)

It is recommended that a service valve is installed in the cold water supply pipe and the thermostatic mixing valve should have connections containing an isolating valve, in order to isolate the tap should servicing be required in the future.

It is recommended that independant filters are installed in the supply pipes to maintain water quality.



Installation

Prior to installation the system should be thoroughly flushed.

For ease of installation we recommend that the tap is installed onto the basin prior to the basin being installed when access to the back nut is readily available.

The tap for the hot water should be fitted on the left when facing the basin and the cold on the right.

If replacing existing taps ensure the water supply is turned off and that the old taps are completely removed.

Fitting to Basin

Insert the threaded inlet through the hole in the basin. Fit the rubber washer and back nut onto the threaded inlet to secure the tap. Do not over tighten the backnut.

Use a swivel connector with a fibre washer (tap connector) to connect the water supply and make a water tight joint.

Note: if replacing existing taps the threaded inlet may be shorter than the original taps.

Repeat the operation for the second tap.

Turn on the water supply to both taps and run the water for a couple of minutes to check for leaks.

Care and Cleaning

To prolong the life of the tap ensure it is serviced regularly.

Inta taps have a high quality finish and should be treated with care.

An occasional wipe with a mild washing-up liquid on a soft damp cloth followed by a thorough rinsing is all that is required.

Do not use an abrasive or chemical household cleaner as this may cause damage to the surface finish.

NC600CP Non Concussive Basin Tap (Pair)

Flow Regulator

The NC600 is fitted with a 4 l/min flow regulator which is installed in the flow control cartridge.

The flow regulator can be removed or replaced if required during servicing.

Replacing the Flow Regulator

Ensure the water supply to the tap is turned off.

Carefully unscrew the flow control cartridge from the tap body to prevent any damage to the chrome finish.

Some water may escape when the flow regulator is removed.


Pull the cartridge cover away from the flow regulator cartridge to expose the 4 l/min regulator.

Remove the regulator from the flow control cartridge and examine for damage or deposits.

Replace with a new 4 l/min regulator or leave empty.

Push the cartridge cover back onto the flow regulator.

Screw the assembled flow control cartridge back into the tap body and tighten to secure a water tight joint, do not over tighten.

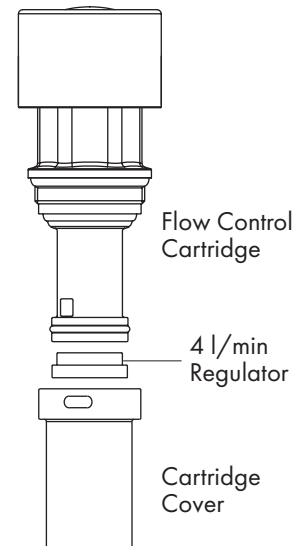

Red and Blue Indices

The red and blue indices are interchangeable.

Carefully prise out the indice and replace with the desired colour.